

RUST-OLEUM® HOME Interior Floor Coating is an extremely durable, easy to use, revolutionary technology that allows you to coat over a wide variety of substrates inside the home without stripping, sanding or priming. Transform any room by revamping your outdated floor — simply clean, then apply the required **BASE COAT + TOPCOAT** system for a brand new look to your space.

RUST-OLEUM HOME BASE COAT MUST BE APPLIED FIRST. ALLOW TO DRY FOR 6 HOURS. THEN APPLY RUST-OLEUM HOME TOPCOAT.

LIMITATIONS: Do not use on exterior spaces or garage floors. Do not use on interior surfaces that are sealed with a superhydrophobic sealer. Not for use inside showers. Not food safe.

SYSTEM APPLICATION: RUST-OLEUM HOME BASE COAT is ready to use. Do not thin. Stir thoroughly prior to use. If using more than one can, mix cans together for colour uniformity. Apply when air (ambient) temperature is 10-32°C (50-90°F) and relative humidity is below 85%.

Use a high quality bristle brush or edge to trim the perimeter and hard-to-reach areas. Use a long handled roller and a high-quality, 10 mm (3/8") nap roller cover to apply an even coat onto the surface. **STEP 1:** Apply in 1.2 m x 1.2 m (4' x 4') sections, and maintain a wet edge while rolling. Do not let product puddle. Roll paint right into the grout. Use roller to work paint into the grout for complete coverage. Only one coat is recommended. After coating the entire floor, wait 6 hours before applying any necessary touch-ups. Let touched-up areas dry for 1-2 hours (dry to touch) and then top coat can be applied. **STEP 2:** Apply RUST-OLEUM HOME TOPCOAT (SOLD SEPARATELY). The TOPCOAT can be applied 6 hours after initial base coat application.

RUST-OLEUM HOME TOP COAT IS REQUIRED (See product for instructions). **DRY TIME:** For full system, allow 24 hours for light foot traffic. Allow 72 hours before replacing furniture (avoid dragging). Full cure is 7 days. Do not wash before 7 days.

COVERAGE: 27.9-37.2 m² (300-400 ft²) for one coat per 3.78 L (for non-porous surfaces); 23.2-27.9 m² (250-300 ft²) for one coat per 3.78 L (for porous surfaces). Second coat may be applied if desired. Wait 6 hours after first coat before applying second coat.

NOTE: For White, 2 coats are required. **CLEAN-UP AND STORAGE:** Use water and mild detergent. Dried product remove with lacquer thinner. Protect unused product from freezing. Fully cured floor may be cleaned with mild soap and water after 7 days. Do not use an abrasive cleaner.

CAUTION: Use only in a well ventilated area. Do not breathe vapours. May irritate eyes and skin. Do not get in eyes, on skin or clothing. **KEEP OUT OF REACH OF CHILDREN. FIRST AID TREATMENT:** If breathed in, move person to fresh air. If swallowed call Poison Control Centre or doctor immediately. Do not induce vomiting. If on skin, rinse well with water.

SATISFACTION GUARANTEED: This product will yield satisfactory results when applied in accordance to the directions provided. Liability is limited to the replacement value of the product only, within one year, with proof of purchase. If you are dissatisfied with this product, contact Rust-Oleum Product Support at 1-800-387-3625 for a full refund of the purchase price.

DIRECTIONS
SURFACE PREPARATION: Rinse or sweep away any dirt and dust. Clean the entire floor with an abrasive cleaner, degreaser or stain remover. Rinse thoroughly and allow to dry completely. **FOR ANY AREAS WHERE CAULK IS PRESENT, CAULK NEEDS TO BE REMOVED BEFORE APPLYING COATING. FOR WAXED FLOORS, WAX NEEDS TO BE REMOVED BEFORE APPLYING COATING.**

NO STRIPPING SANDING PRIMING

TRUSTED QUALITY SINCE 1921
RUST-OLEUM® HOME

INTERIOR FLOOR COATING

TRANSFORMS TILE, VINYL, WOOD & MORE

STEP 1 OF 2
BASE COAT

Le revêtement pour plancher intérieur RUST-OLEUM® MAISON est une technologie très durable, facile à utiliser et révolutionnaire qui vous permet de recouvrir une large variété de substrats à l'intérieur, sans décapage, ponçage ni apprêtage. Transformez n'importe quelle pièce en modernisant vos planchers démodés — il suffit de nettoyer et d'appliquer le système de **COUCHE DE FOND + COUCHE DE FINITION** pour donner un aspect comme neuf à votre espace.

LA COUCHE DE FOND RUST-OLEUM MAISON DOIT ÊTRE APPLIQUÉE EN PREMIER. LAISSEZ SÉCHER PENDANT 6 HEURES. ENSUITE, APPLIQUEZ LA COUCHE DE FINITION RUST-OLEUM MAISON.

RESTRICTIONS : Ne pas utiliser sur les espaces extérieurs ou les planchers de garage. Ne pas utiliser sur les surfaces intérieures qui sont scellées avec un scellant superhydrophobe. Ne pas utiliser à l'intérieur de la douche. N'est pas apte au contact alimentaire.

Mélanges bien avant l'utilisation. Si vous utilisez plus d'un contenant, mélangez les contenants ensemble pour assurer une couleur uniforme. Appliquez lorsque la température de l'air (ambiante) se situe entre 10 et 32 °C (50 et 90 °F) et que l'humidité relative est inférieure à 85%. Utilisez un pinceau ou un applicateur pour bordures de haute qualité afin de peindre le périmètre et les endroits difficiles d'accès. Utilisez un rouleau à manche long et un manchon de rouleau à poils de 10 mm (3/8 po) de haute qualité pour appliquer une couche uniforme sur la surface.

ÉTAPE 1 : Appliquez par sections de 1,2 m x 1,2 m (4 pi x 4 pi) et maintenez une bordure humide lors de l'application au rouleau. Ne laissez pas le produit former de flaques. Roulez la peinture sur le coulis. Utilisez un rouleau pour peindre le coulis, pour une bonne couverture. L'application d'une seule couche est recommandée. Après avoir entièrement recouvert le plancher, attendez 6 heures avant d'appliquer toute retouche nécessaire. Laissez sécher les endroits retouchés pendant 1 à 2 heures (sec au toucher), puis la couche de finition pourra être appliquée. **ÉTAPE 2 :** Appliquez la COUCHE DE FINITION RUST-OLEUM MAISON (VENDUE SÉPARÉMENT). La COUCHE DE FINITION peut être appliquée 6 heures après l'application initiale de la couche de fond. La COUCHE DE FINITION RUST-OLEUM MAISON EST NECESSAIRE (voir le mode d'emploi sur le produit).

RECOMMANDATION POUR LA COUCHE DE FOND : Tout plancher devrait être testé aux fins de bonne adhérence avant l'application du revêtement sur l'entièreté du plancher. Nettoyez une zone de 7,6 cm x 7,6 cm (3 po x 3 po) dans un endroit peu visible et laissez sécher. Appliquez la couche de fond sur la surface et laissez sécher pendant 12 heures. Coupez un X dans le revêtement jusqu'au plancher à l'aide d'un couteau tout-usage. Appliquez un morceau de ruban adhésif en toile de 10 cm (4 po) sur le X et appuyez fermement. Retirez le ruban d'un seul coup. Si plus de 10 % du revêtement s'enlève, le plancher devra être poncé avec du papier sable grain 60-80 avant d'être entièrement recouvert.

LIRE ATTENTIVEMENT TOUTES LES INSTRUCTIONS AVANT D'ENTREPRENDRE LE PROJET

NETTOYAGE ET ENTREPOSAGE : Utilisez de l'eau et un détergent doux. Éliminez tout produit séché avec une tige ou un diluant. Protégez le produit non utilisé contre le gel. Le plancher entièrement sec peut être nettoyé avec un savon doux et de l'eau après 7 jours. N'utilisez pas de nettoyant abrasif.

MISE EN GARDE : N'utilisez que dans un endroit bien aéré. Ne pas respirer les vapeurs. Peut irriter les yeux et la peau. Éviter tout contact avec les yeux, la peau ou les vêtements. GARDER HORS DE LA PORTÉE DES ENFANTS. **PREMIERS SOINS :** En cas d'inhalation, transporter à l'air frais la personne exposée. En cas d'ingestion, appeler immédiatement un centre antipoison ou un médecin. Ne pas provoquer le vomissement. En cas de contact avec la peau, bien rincer avec de l'eau.

GARANTIE DE SATISFACTION : Ce produit donnera des résultats satisfaisants lorsqu'il est appliqué selon les directives fournies. La responsabilité se limite uniquement à la valeur de remplacement du produit, au plus tard un an après l'achat, sur présentation d'une preuve d'achat. Si ce produit ne vous donne pas entière satisfaction, communiquer avec le service d'appui technique de Rust-Oleum au 1-800-387-3625 pour un remboursement intégral du prix d'achat.

AUCUN DÉCAPAGE PONÇAGE APPRÊTAGE

QUALITÉ ÉPROUVÉE DEPUIS 1921
RUST-OLEUM® MAISON

REVÊTEMENT POUR PLANCHER INTÉRIEUR

TRANSFORME LES CARREAUX, LE VINYLE, LE BOIS ET PLUS ENCORE

ÉTAPE 1 DE 2
COUCHE DE FOND

BASE COAT DRY TIME	SYSTEM DRY TIME
6 HOURS (Before Applying TOPCOAT)	24 HOURS (Foot Traffic) 7 DAYS (Full Cure)
NUMBER OF COATS	COVERAGE
1 BASE COAT + 1 TOPCOAT	27.9-37.2 m ² (300-400 ft ²)

WHERE TO USE: For use on horizontal surfaces. Great for bare, stained, sealed or previously coated surfaces such as, ceramic and porcelain tile, hardwood, concrete, laminate, vinyl and linoleum.

RECOMMENDATION FOR BASE COAT: All flooring should be tested for adhesion before coating the entire floor. Clean a small 7.6 cm x 7.6 cm (3"x3"), inconspicuous area, let dry. Apply base coat over area and allow to dry for 12 hours. Take a utility knife and make an X in the coating down to the flooring. Apply a 10 cm (4") piece of duct tape over the X and press firmly. Remove the tape with one quick pull. If more than 10% of the coating comes off, the floor will need to be sanded with 60-80 grit sand paper before coating the entire floor.

READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING PROJECT

DIRECTIONS
SURFACE PREPARATION: Rinse or sweep away any dirt and dust. Clean the entire floor with an abrasive cleaner, degreaser or stain remover. Rinse thoroughly and allow to dry completely. **FOR ANY AREAS WHERE CAULK IS PRESENT, CAULK NEEDS TO BE REMOVED BEFORE APPLYING COATING. FOR WAXED FLOORS, WAX NEEDS TO BE REMOVED BEFORE APPLYING COATING.**

REMARKS: Pour le blanc, 2 couches sont nécessaires.

2-STEP SYSTEM APPLICATION

Clean the surface

STEP 1 - BASE COAT




Allow 6 hours to dry

STEP 2 - TOPCOAT



Allow 24 hours to dry

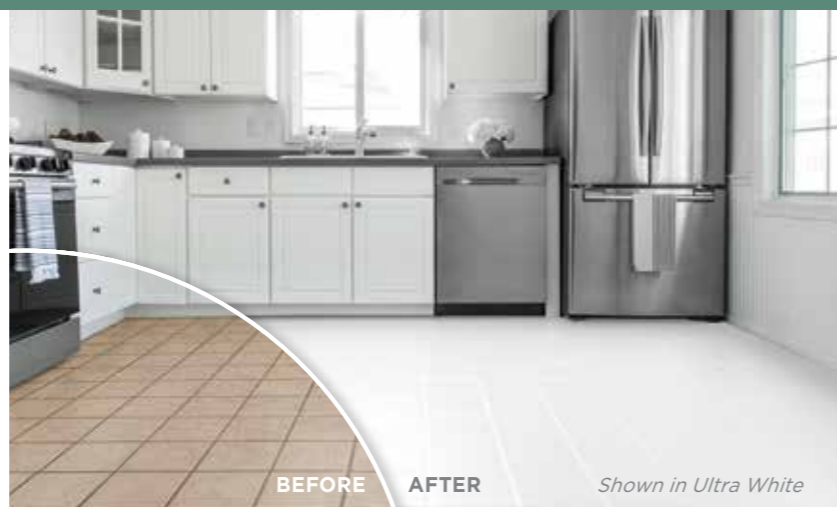

BEFORE AFTER Shown in Ultra White

TRANSFORM ANY FLOOR FOR USE ON

- CERAMIC TILE
- PORCELAIN TILE
- CONCRETE
- HARDWOOD
- LAMINATE
- VINYL & MORE

- Aged Grey
- Cake Batter
- Coastal Fog
- French Grey
- Grey Owl
- Greige
- Haven Grey
- Icy Grey
- Oyster Shell
- Pearl Grey
- River Mist
- Sandstone
- Seafoam
- Seattle Mist
- Smoke
- Vanilla Milkshake
- Steam Grey
- Windsor Grey

Fast Dry & Low Odour

Superior Adhesion to Tough Surfaces

Easy to Clean & Maintain

Covers Up To 37.2 m² (400 ft²)

ULTRA WHITE / LIGHT TINT BASE
MAY BE TINTED BEFORE USE

3.61 L

RUST-OLEUM CANADA
CONCORD ON L4K 4T8
www.rustoleum.ca 1-800-387-3625
Made in USA/Fabrique aux États-Unis CCR, 2001 RPCCC (2001)
©2019 Rust-Oleum Corporation 356184 1219



SYSTÈME À APPLICATION EN 2 ÉTAPES

Nettoyez la surface

ÉTAPE 1 - COUCHE DE FOND



Laissez sécher pendant 6 heures

ÉTAPE 2 - COUCHE DE FINITION



Laissez sécher pendant 24 heures



AVANT APRÈS Illustré en ultra blanc

TRANSFORMEZ N'IMPORTE QUEL PLANCHER À UTILISER SUR

- CARREAUX DE CÉRAMIQUE
- CARREAUX DE PORCELAINÉ
- BÉTON
- BOIS DUR
- LAMINÉ
- VINYLE ET PLUS ENCORE

- Gris vieilli
- Pâte à gâteau
- Brouillard côtier
- Gris français
- Hibou gris
- Grège
- Gris havre
- Gris glacé
- Coquille d'huître
- Gris parle
- Brume de rivière
- Grès
- Écume de mer
- Brume de Seattle
- Fumée
- Lait frappé à la vanille
- Gris vapeur
- Gris Windsor

Séchage rapide et faible odeur

Adhérence supérieure aux surfaces difficiles

Facile à nettoyer et à entretenir

Couvre jusqu'à 37,2 m² (400 pi²)

ULTRA BLANC / BASE À TEINTER CLAIRÉ
PEUT ÊTRE TEINTÉE AVANT L'UTILISATION

3,61 L